


2" TecCrete Grounding Screw (Black Finish):


$\frac{1}{4}$ " x 20 UNC x 2" long flathead screw & washer with a # 2 phillips drive head




$\frac{1}{4}$ " x 20 UNC x 2" Flat Head Screw

TecCrete or Tecnika Stringer Screw (Black Finish):

$\frac{1}{4}$ " x 20 UNC x 1- $\frac{3}{4}$ " long flathead screw with a # 2 phillips drive head




$\frac{1}{4}$ " x 20 x 1- $\frac{3}{4}$ " Flat Head Screw

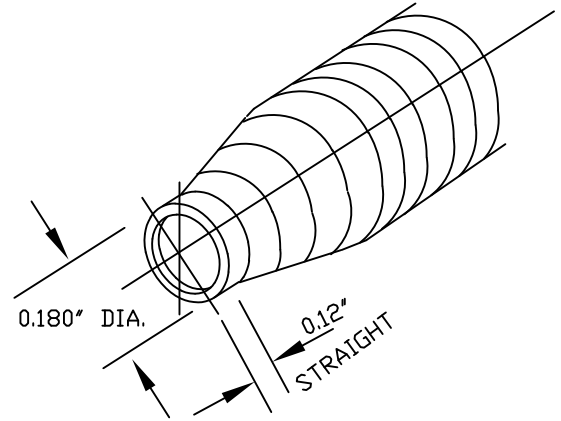

2" TecCrete Corner Lock Screws or Stringer Screws (Black or Bright Zinc Finish):


$\frac{1}{4}$ " x 20 UNC x 2" long flathead screw with a # 2 phillips drive head



$\frac{1}{4}$ " x 20 x 2" Flat Head Screw

3- $\frac{1}{2}$ " TecCrete Corner Lock Screw for use with Stringers (Black Finish):


$\frac{1}{4}$ " x 20 UNC x 3- $\frac{1}{2}$ " long flat head with a #2 phillips drive with a #23 type dog point



$\frac{1}{4}$ " x 20 x 3- $\frac{1}{2}$ " Flat Head Screw with a #23 type Dog Point

1- $\frac{1}{2}$ " Ultra Low Stringer Screw (Black Finish):

$\frac{1}{4}$ " x 20 UNC x 1- $\frac{1}{2}$ " long flathead screw with a # 2 phillips drive head



$\frac{1}{4}$ " x 20 x 1- $\frac{1}{2}$ " Flat Head Screw