
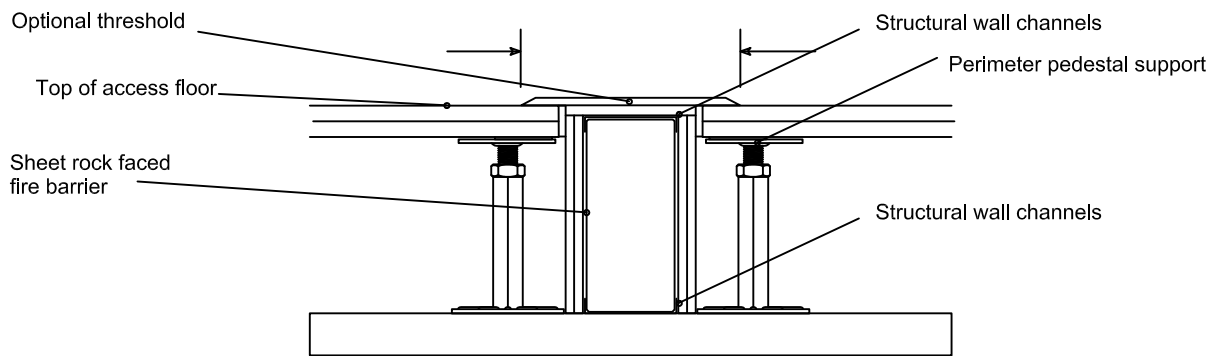


Fire Barrier at Door Threshold

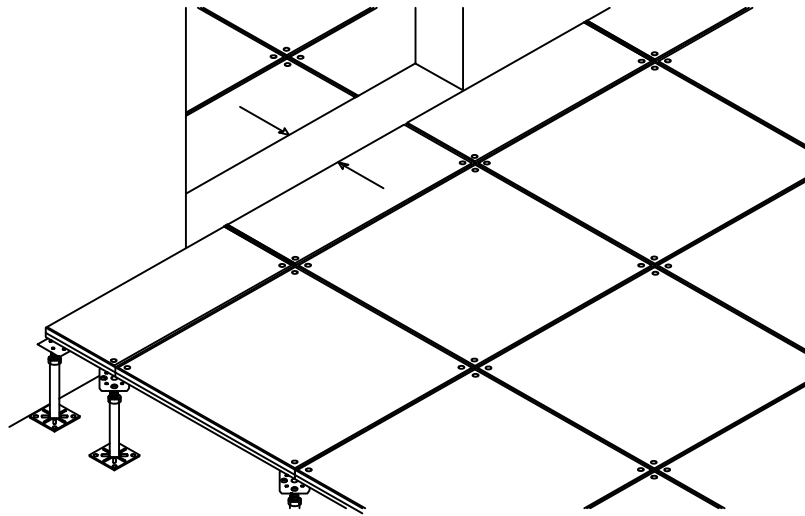

Note: For plenum spaces apply a bead of caulk at slab and foundation joints.